

Supplemental Assembly Instructions

DIRECT-TEMP® SELKIRK DIRECT VENT SYSTEM

VINYL SIDING STANDOFF - COUNTER FLASHING

Selkirk DIRECT-TEMP is designed to be the vent and air intake system for an approved list of direct vent appliances.

Selkirk DIRECT-TEMP materials, design, and these instructions have been evaluated and listed by Underwriters Laboratory Inc.

Contact local building or fire officials about restrictions and installation inspections in your area, and obtaining building permits.

Do not install Selkirk DIRECT-TEMP without first carefully reading the **main instructions** and the appliance manufacturer's instructions. If you still have any doubt about your ability to complete the installation in a safe manner after reading these instructions, arrange for a professional installation.

The appliance must be listed for use with Selkirk DIRECT-TEMP. Refer to the appliance manufacturer's label and installation instructions to make sure that the Selkirk's DIRECT-TEMP system is approved for use with your specific appliance.

Selkirk DIRECT-TEMP is for use only with appliances that are certified or listed by a major qualified testing agency, such as AGA, CSA, OMNI, UL, or Warnock Hersey.

VINYL SIDING STANDOFF - COUNTER FLASHING

Selkirk DIRECT-TEMP Vinyl Siding Standoff Counter Flashing is used before the vinyl siding is to be installed. It will provide protection for your vinyl siding to be finished up to the edges of the Counter Flashing. It is used on the Round or Square Horizontal Termination Cap without fear of warping or melting the siding prior to the installation of the vinyl siding.


Contains:

- 4 - Counter Flashing Siding Standoff Brackets;
- 1 - Hardware Pack (12 sheet metal screws);
- 1 - Supplemental Instruction Sheet

How to Install:


1. Secure the 4 Counter Flashing Siding Standoff brackets (see Fig. 1) together with the supplied sheet metal screws, 2 per corners (see Fig. 2).

Fig. 1

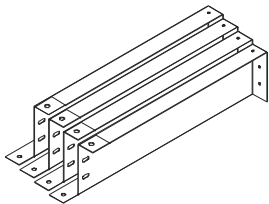

Product Assembled

Fig. 2

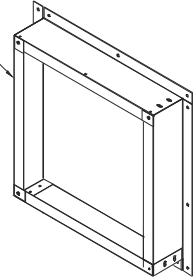

2. Secure the assembled Counter Flashing Vinyl Siding Standoff on the wall, with suitable fasteners through the flanged edges, centered around the framed wall opening.

3. Once the siding is installed, seal around the perimeter of the Vinyl Siding Standoff using silicone to ensure a weather tight seal.

4. Position the Horizontal Termination Cap (see Fig. 3 or 4) over the Vinyl Siding Standoff. Secure in place with 4 sheet metal screws through the 4 holes provided on the face plate of the Horizontal Termination. Make sure the arrow on the Termination is pointing up.

5. Continue your installation by following the main DIRECT-TEMP installation instructions.

Fig. 3

Square Horizontal Termination Cap


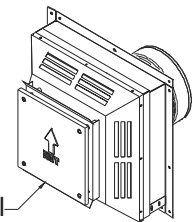


Fig. 4

Round Horizontal Termination Cap

Counter Flashing Vinyl Siding Standoff

Make sure Drain Holes are at the bottom

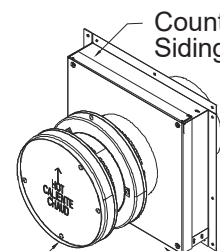

NOTE: For the Round Horizontal Termination, make sure the Siding Standoff Bracket with the 3 drain holes is positioned at the bottom of the assembly (see Fig. 4).

Selkirk Corporation

5030 Corporate Exchange Blvd. SE
Grand Rapids, MI 49512
Toll Free: 1.800.VENT (8368)
info@selkirkcorp.com



www.selkirkcorp.com

Selkirk Canada Corporation

950 South Service Road, Second Floor
Stoney Creek, ON L6E 6A2
Toll Free: 1.888.SELKIRK (735.5475)
cscanada@selkirkcorp.com